




VTech Learning Tunes Karaoke Speaker Replacement

This guide will show you how to disassemble the faulty speaker and replace it with a new one.

Written By: Gamuchirai Chifamba

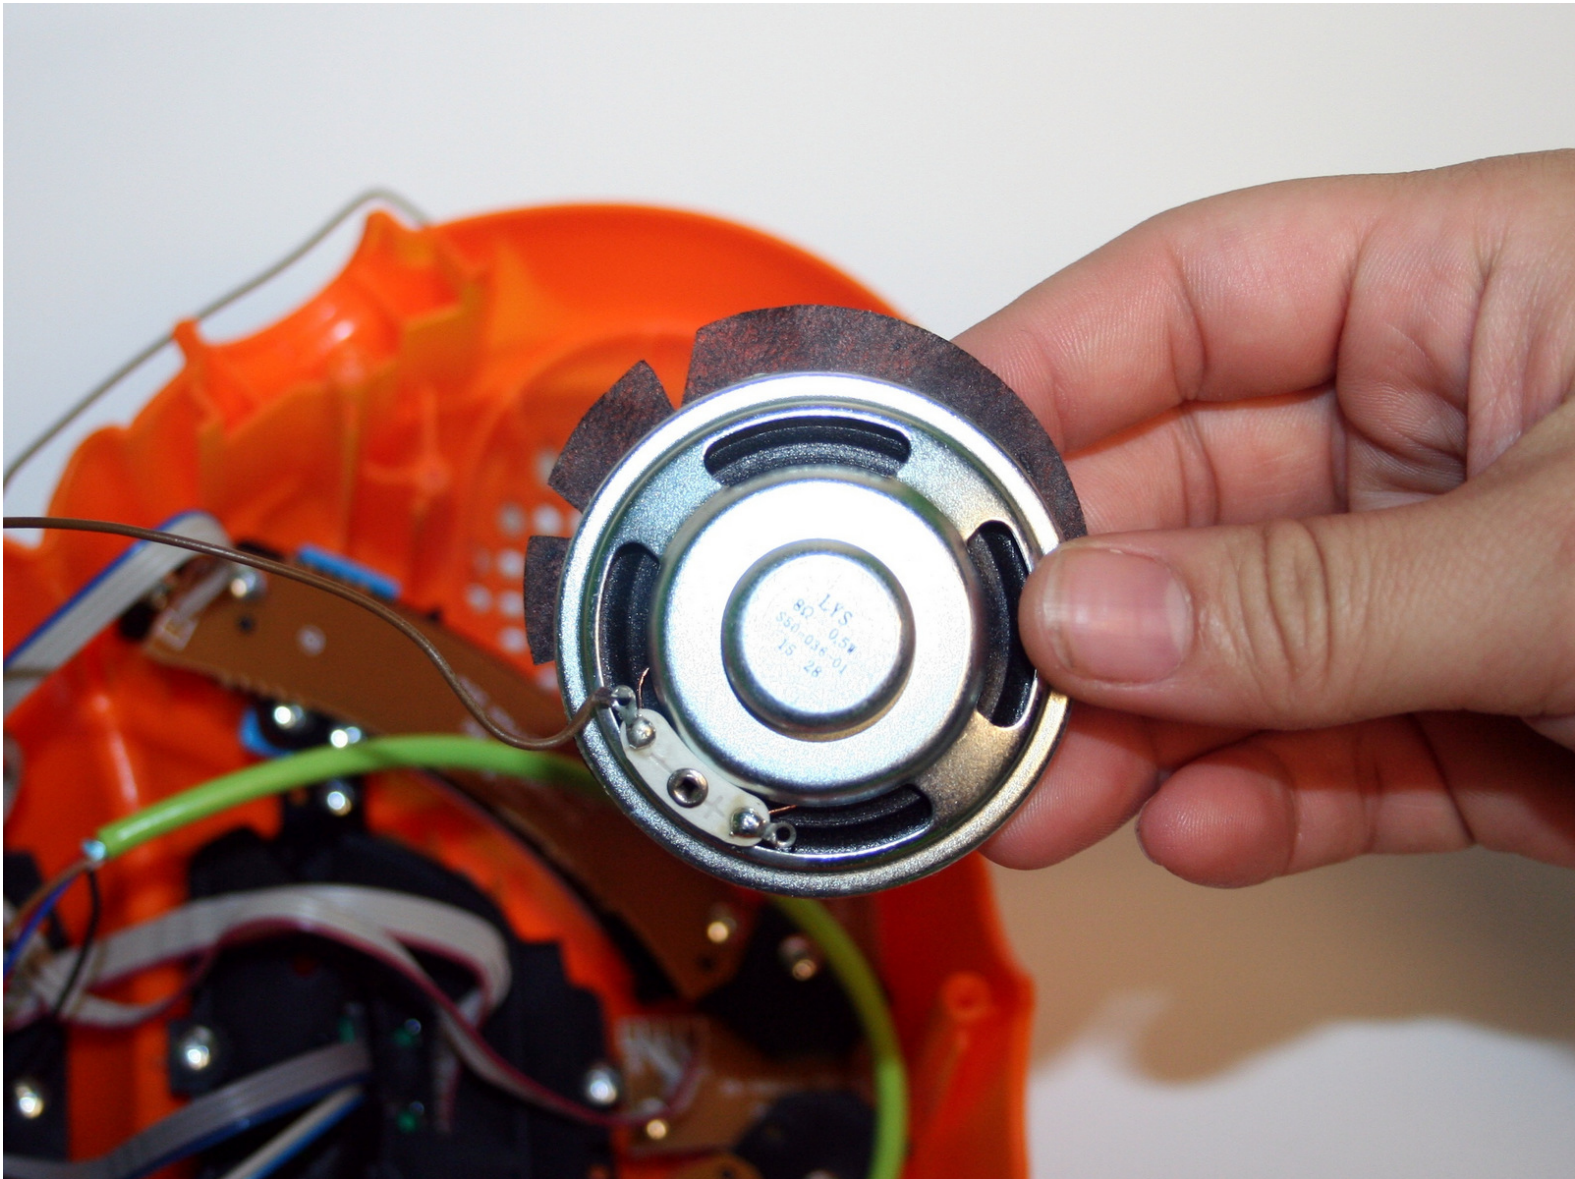

INTRODUCTION

Is the sound not audible and/or distorted? This guide may help in finding a solution to fix the problem.

TOOLS:

- [Soldering Workstation](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Flathead Screwdriver](#) (1)
-

Step 1 — Speaker



- To remove the battery door, loosen the screw using a Flathead screwdriver.
- ⓘ A coin can also be used to loosen the screw.

Step 2





- Remove the battery door and take out the batteries.

Step 3



- Remove the six 9.5 mm Phillips #2 screws.
- Remove the six 6.0 mm Phillips #2 screws.

Step 4

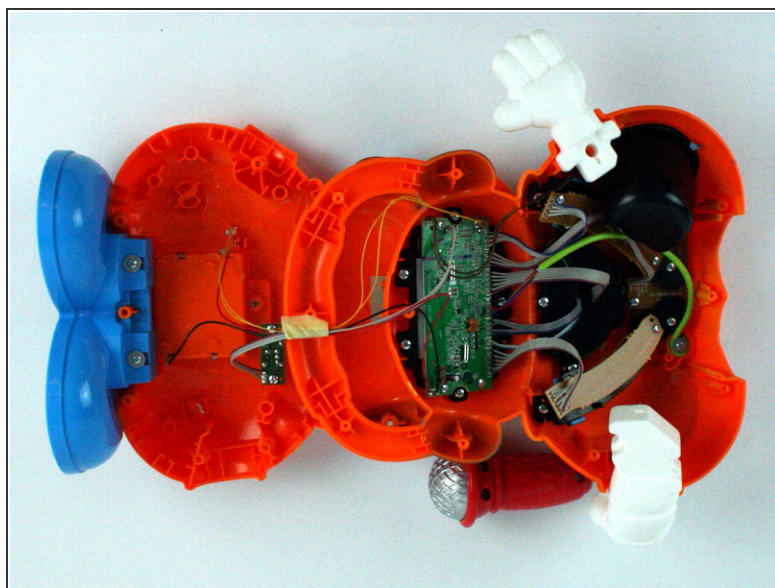
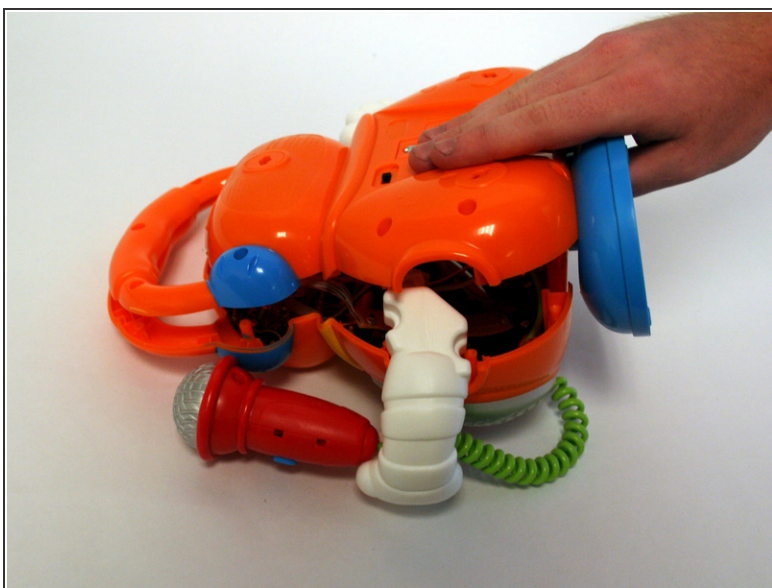


- Gently pull up on the rear panel.

⚠ Be careful to not pull on the wire connections.


- Carefully place the back panel underneath the top panel with the tops facing each other, as shown in the picture.

Step 5

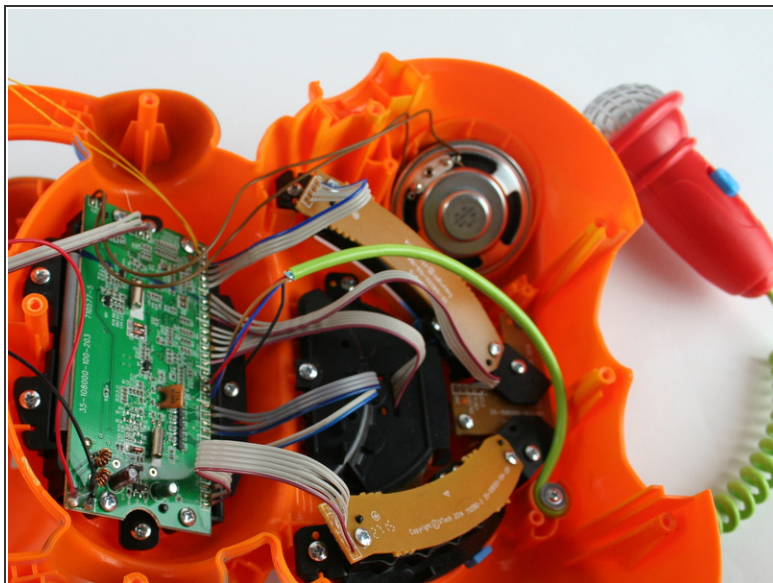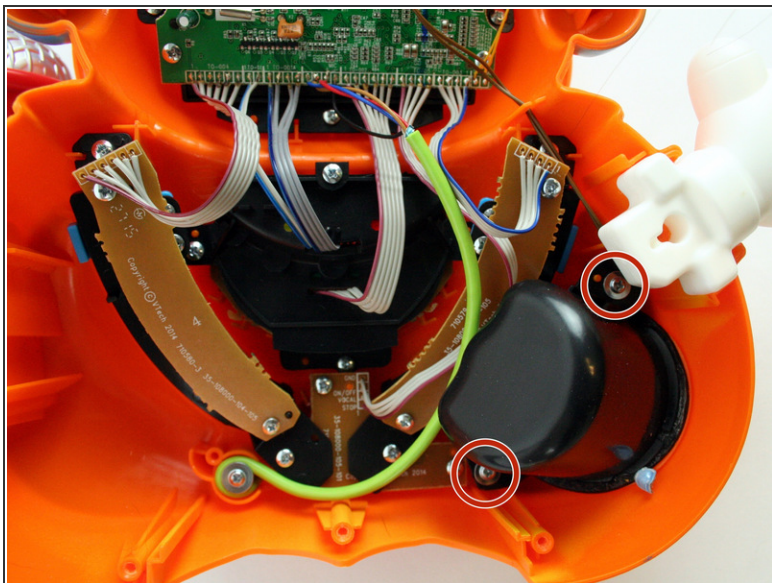

- Remove two 7.9 mm Phillips #1 screws on the speaker cover.
- After removing the screws, remove the black plastic speaker cover to expose the speaker.

Step 6

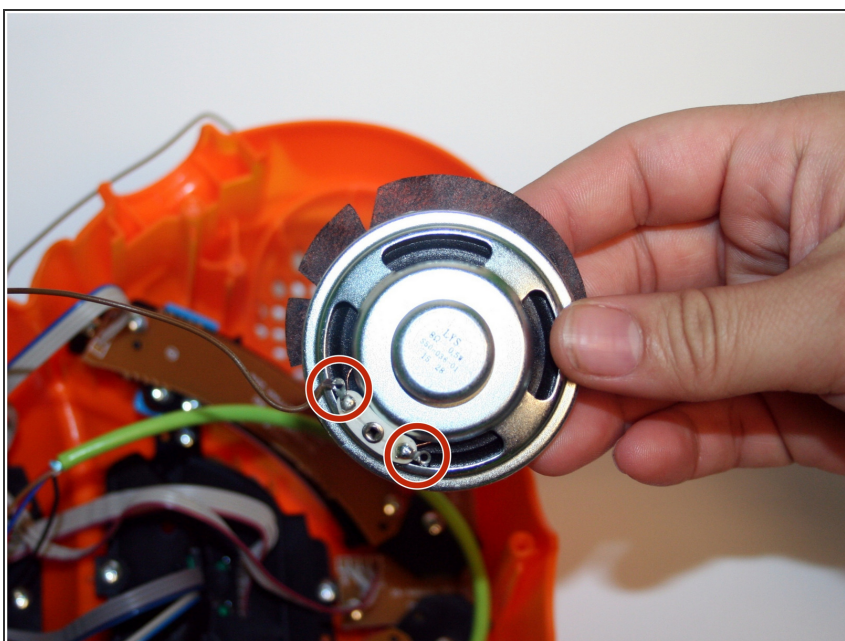

- Desolder the speaker at the solder points to remove.
- Learn more about soldering and desoldering connections [here](#).

To reassemble your device, follow these instructions in reverse order.

